

### **How to Use the HD008-B Keypad with other Control Relays**

Arm/Lock : Press 5,5,5 Green LED will flash to confirm.

Disarm/Unlock : Press 1,3,5,7,9,\* Green LED will flash to confirm.

### **How to Modify your Password**

The factory default password is 1,3,5,7,9,\*. To change/modify this default to a custom code press \*,\*,\*, next OLD PASSWORD \*, NEW PASSWORD, \*. If code is accepted the Red LED will flash 2 times. 4 Red LED flashes indicates code was not accepted.

\*\*\*Please note any custom Unlock code must be 4-8 digits

### **What to do if you forget your password?**

If you forgot your password, please contact us at [support@poplocks.com](mailto:support@poplocks.com). Instructions and trouble shooting information are available [www.poplocks.com](http://www.poplocks.com).

### **How many times can you input a password?**

After 3 incorrect password attempts the Red LED will flash quickly for 5 seconds and you will be locked out for 2 minutes. During this 2 minutes the keypad will not accept any passwords.

### **How to replace the battery?**

The battery replacement is in the rear housing. Using your finger depress the friction latch and remove back cover. Remove the 12 volt battery and replace battery with correct polarity.

HD008-BInstructions.5

### **How to Use the HD008-B Keypad with other Control Relays**

Arm/Lock : Press 5,5,5 Green LED will flash to confirm.

Disarm/Unlock : Press 1,3,5,7,9,\* Green LED will flash to confirm.

### **How to Modify your Password**

The factory default password is 1,3,5,7,9,\*. To change/modify this default to a custom code press \*,\*,\*, next OLD PASSWORD \*, NEW PASSWORD, \*. If code is accepted the Red LED will flash 2 times. 4 Red LED flashes indicates code was not accepted.

\*\*\*Please note any custom Unlock code must be 4-8 digits

### **What to do if you forget your password?**

If you forgot your password, please contact us at [support@poplocks.com](mailto:support@poplocks.com). Instructions and trouble shooting information are available [www.poplocks.com](http://www.poplocks.com).

### **How many times can you input a password?**

After 3 incorrect password attempts the Red LED will flash quickly for 5 seconds and you will be locked out for 2 minutes. During this 2 minutes the keypad will not accept any passwords.

### **How to replace the battery?**

The battery replacement is in the rear housing. Using your finger depress the friction latch and remove back cover. Remove the 12 volt battery and replace battery with correct polarity.

HD008-BInstructions.5