


**Drawing below is represents modification recommended on DRV ducting system when main duct has THREE 6" discharge Ducts**

2 1/4 X 12 X 6 Torpedo Boot  
Home Depot  
Mod #: ERB12X2.25X6  
Internet #: 100205050


Recommend replace existing Straight Boot with this Torpedo End Boot to improve air flow

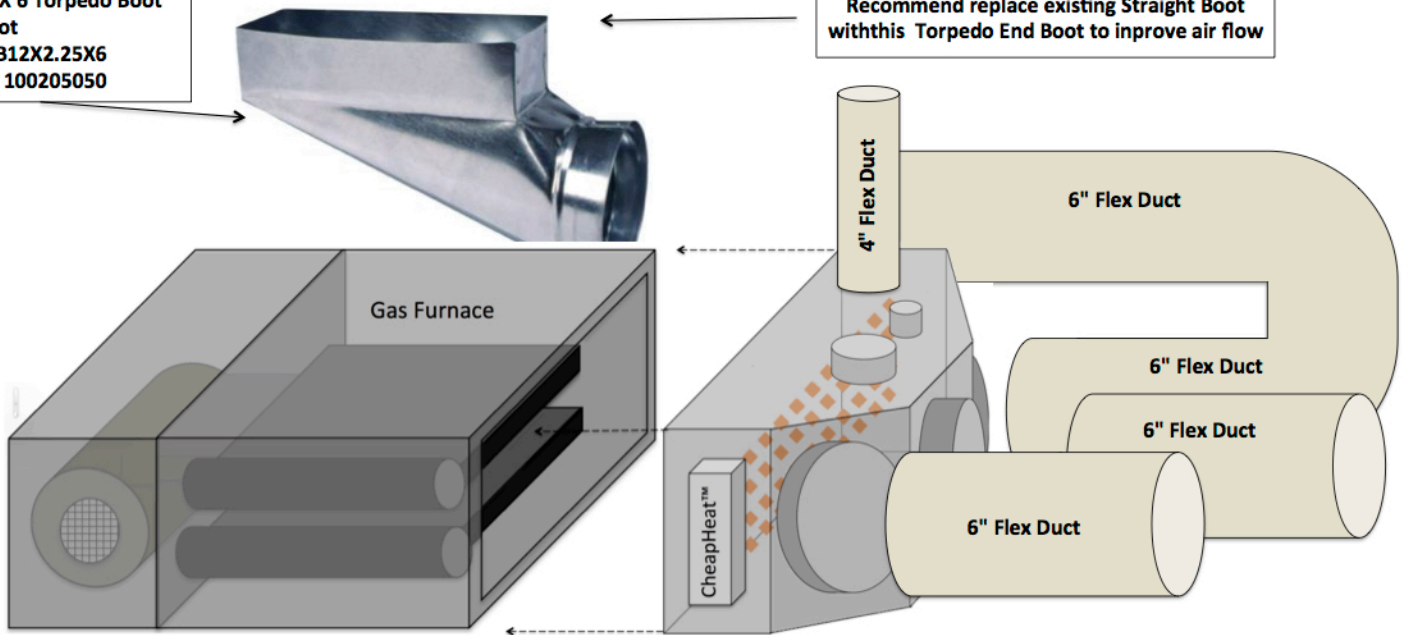

**Drawing below is represents modification needed on DRV ducting system when main duct has TWO 6" discharge Ducts and ONE 4" discharge Duct**

2 1/4 X 12 X 6 Torpedo Boot  
Home Depot  
Mod #: ERB12X2.25X6  
Internet #: 100205050

Recommend replace existing Straight Boot with this Torpedo End Boot to improve air flow

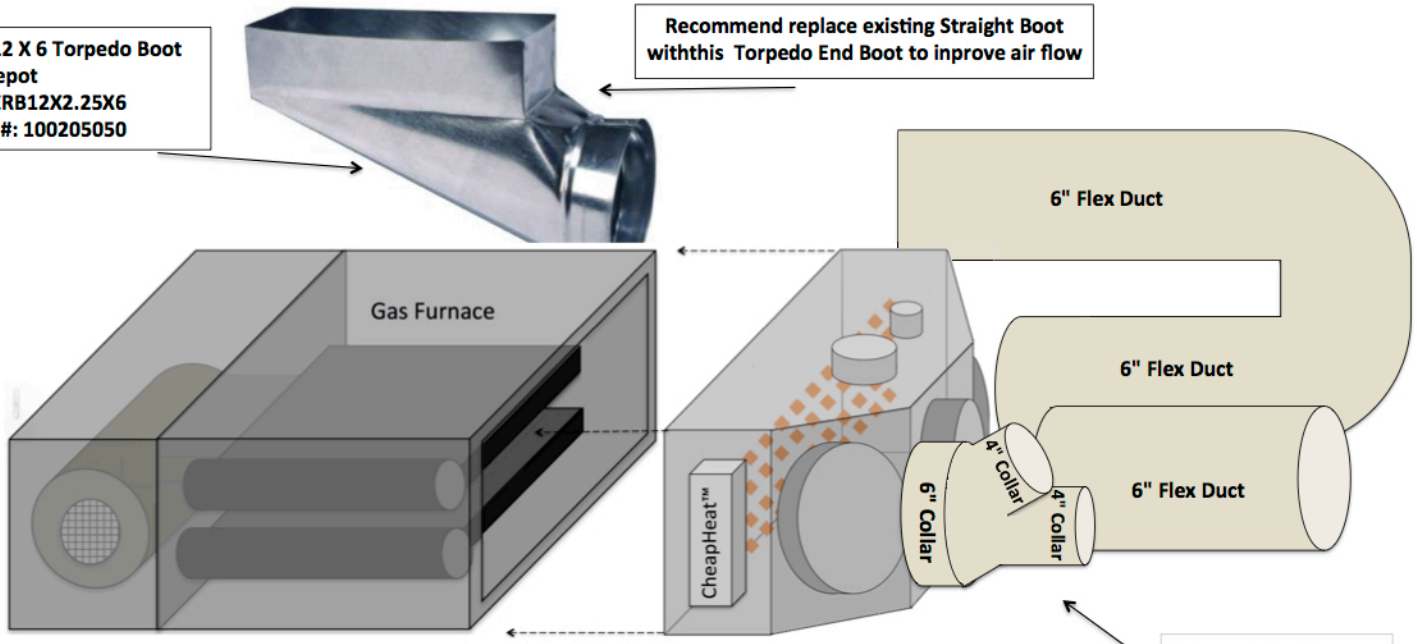

Block off the collar and move bathroom duct to top 4" discharge on branch "Y" (6x4x4).

(6" X 4" X 4") Wye  
Home Depot  
Mod #: Y6X4X4  
Internet #: 204165430